# DF-831

# 8” Digital photo frame

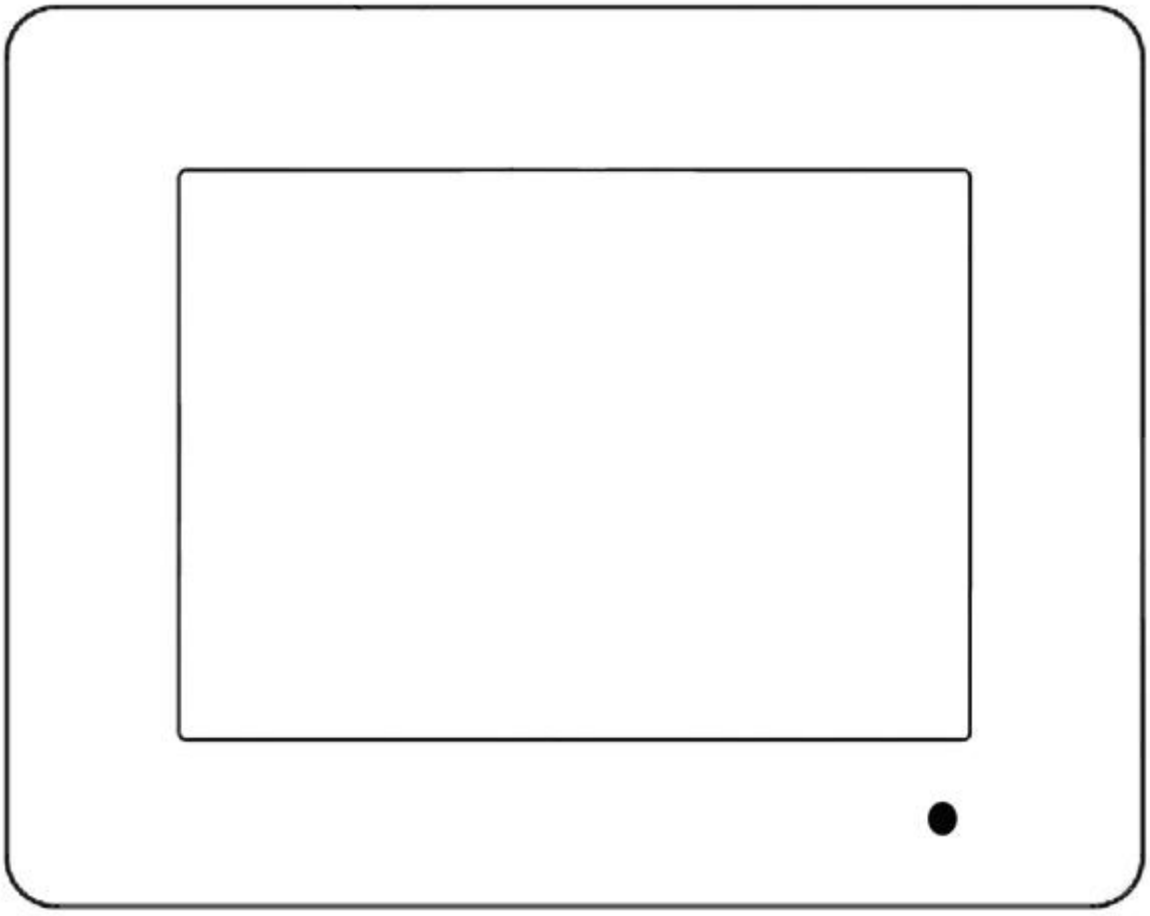

# User manual

For information and support, www.lenco.eu

**1. Getting started:** Checking the appearance:

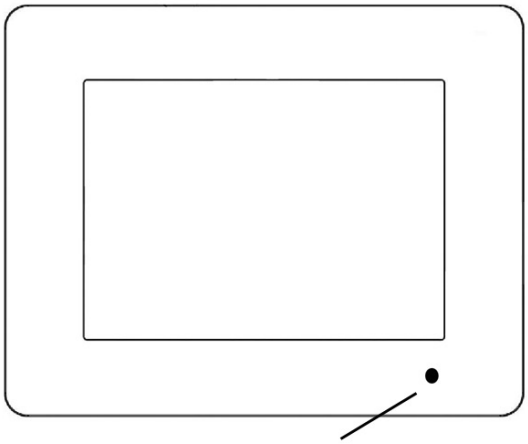

Sensor for remote control

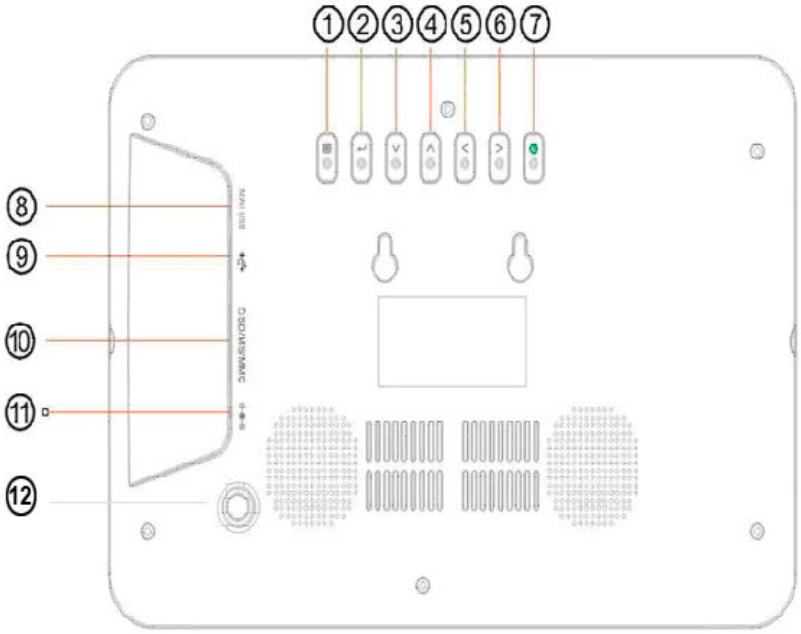


**2. Understanding interface and on-board buttons:**

(1). Menu / Back;
(2) . Confirm
(3) . Down;
(4) . Up;
(5) . Right.
(6) . Left;
(7) . On/Off;
(8). mini USB port
(9). USB port;
(10). SD/MMC reader
(11). Sockets for AC power adaptor;
(12). Frame stand port

### 3. Installing and recharging your unit:

Open the package and remove the protective sleeve from the unit. Screw in the stand to the stand screw hole on the back of the photo frame, Adjust the frame position for vertical or horizontal placement, Plug in the AC adapter into power outlet. Plug the other end into the unit. Insert your memory card and the unit starts the slideshow digital photos automatically.

### 4. Understanding the remote:

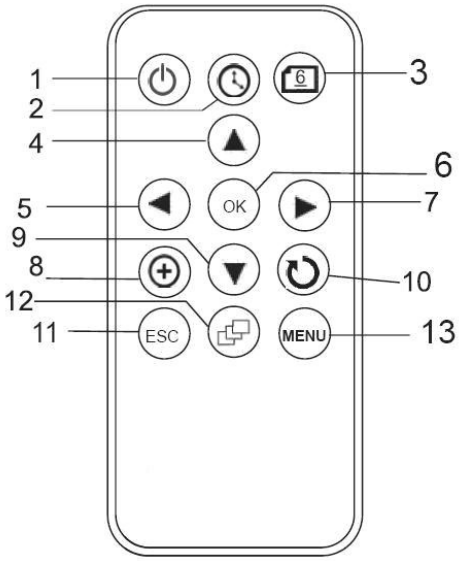


1. Power On / OFF
2. Clock
3. Calendar
4. Go up
5. Go Left / Previous Picture
6. Confirm
7. Go Right
8. Zoom in/out
9. Go Down
10. Rotate
11. Exit / go to previous menu
12. Slideshow
13. Setup

### Understanding the MENU:

1. Function Navigation

Power on the unit, the unit will display the following menu if there is no card inserted.

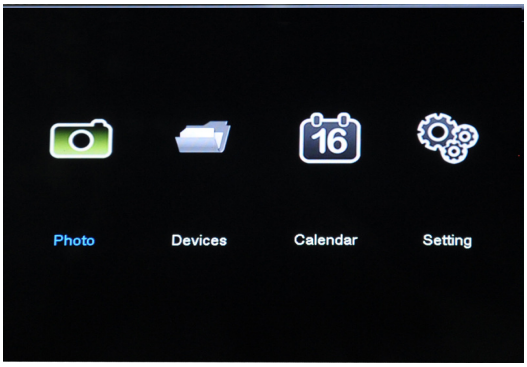


**Figure 1**

You can use the function navigation above to change all aspects of your photo frame from the transitions sytle of your slideshows to the colour balance of the display. To bring up the menu on screen just press the MENU button on board or the ESC button on the remote to go to the above interface.

2. Playing photos

**Figure 2**

**Figure 3**

You can slideshow the photos one by one(Figure 2), or display in thumbnail mode(Figure 3)

3. Select the media source

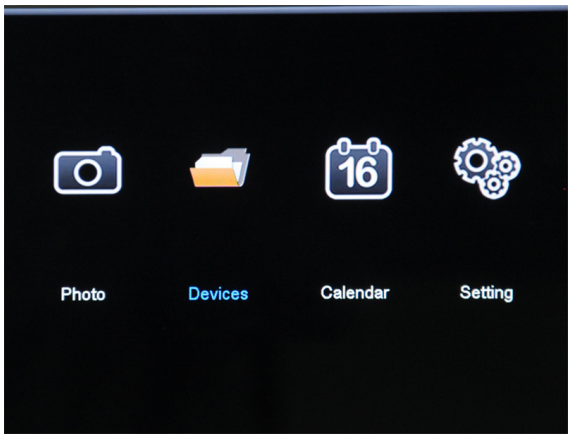


**Figure 4**

**Figure 5**

Select “Device” to show the media source, there are 3 media sources including internal memory, SD card and USB drive (**Figure 5**). If both of SD card and USB drive are inserted, please select the media source first.

4. Display Clock / Calendar

**Figure 6**

**Figure 7**

Select “Calendar” from the function navigation menu shown in Figure 1, the calendar & clock window will be displayed, the frame can display a sub window to slideshow photos as shown in Figure 6, or you can bring up a analogue clock to the screen as shown under Figure 7.

5. System setup

To enable some customized features, please configure the frame via system setup as below:

a. Photo Setup

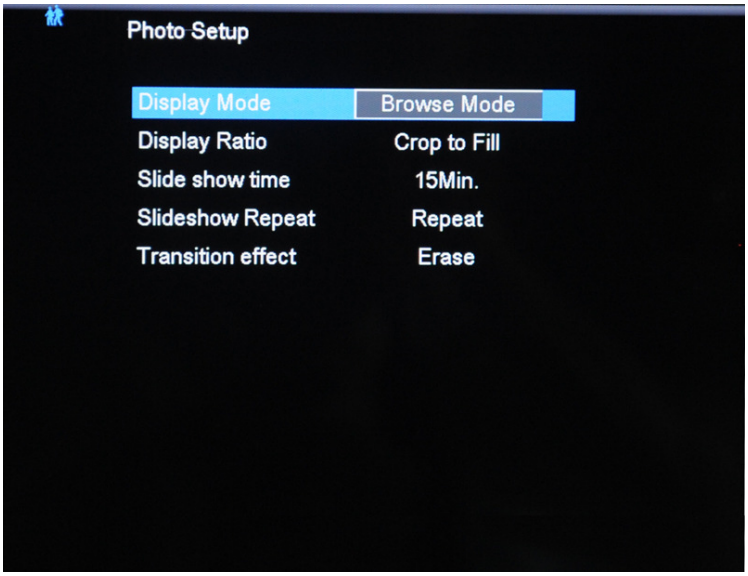


**Figure 8**

Under “Photo Setup”, you can configure Display model, Display Ratio, Slideshow Interval, slideshow repeat as well as transition effect. Navigate with Left / Right button to change the options, use Up/Down to switch between menus.

b. Calendar Setup

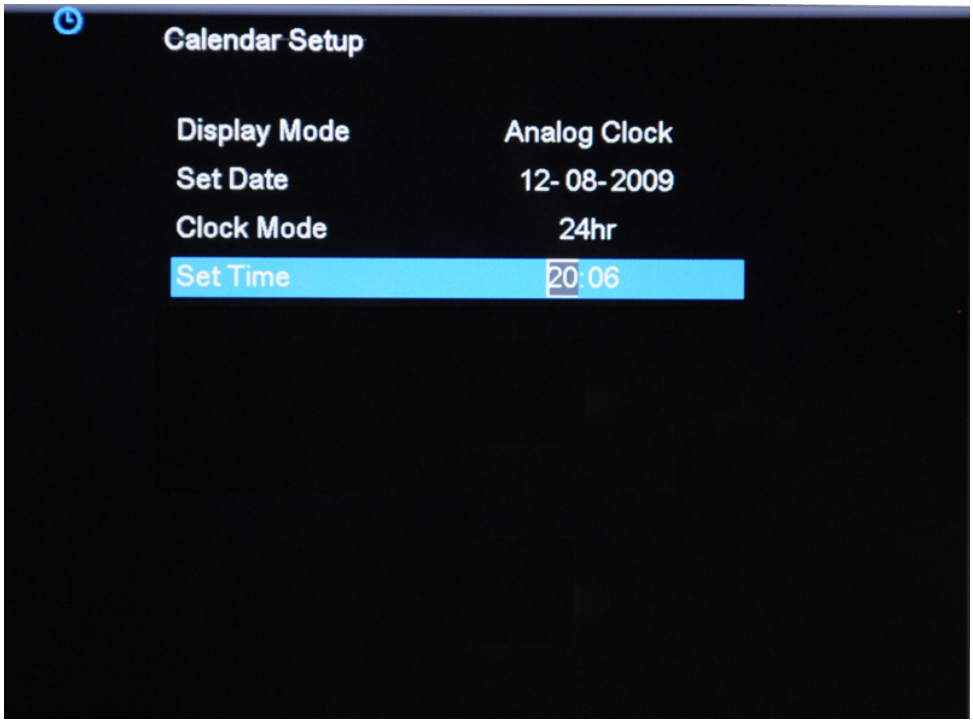


**Figure 9**

As shown in Figure 9, you can configure Display mode(Analog Colck, Digital Clock), set the right date,
Change the clock mode from 24hr to 12hr or vice versa, change the current time settings. Navigate with Left / Right button to change the options, use Up/Down to increase/decrease the numbers.

c. System setup

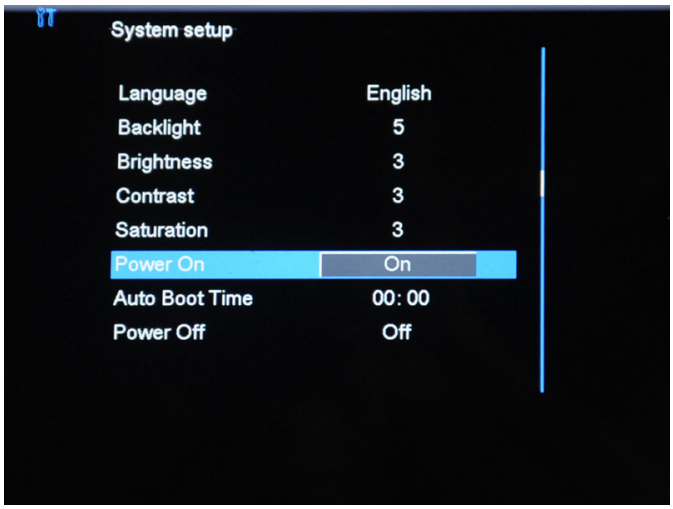

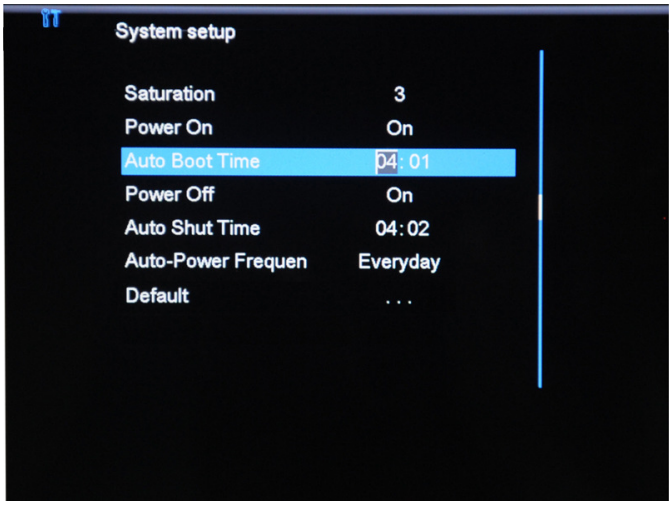


**Figure 10**

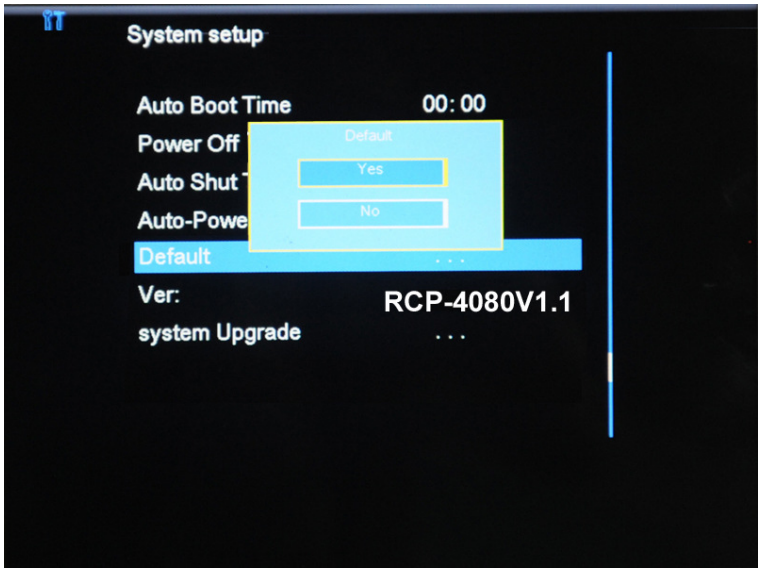


**Figure 11**

(1). Language

As show in Figure 10, select language menu, you can change the language with left/right buttons.

(2). Auto power On/Off

To enable power on/off, firstly, please select “On” to enable power On/ Power Off, as shown respectively in Figure 10 & Figure 11; then set time for auto power on/power off. Use left/right or Up/Down buttons to change the numbers and menus.

(3). Reset to factory default

**Figure 12**

The factory default settings include the optimized configurations for consumers, in case that there is any malfunction or some features can not function as expected, it is highly recommended to restor to factory default (Figure 12), select “Default” then select Yes, all the changed settings will be restored to factory default.

## Trouble-shooting:

| Symptom | Cause | Corrective Actions |
|---|---|---|
| Digital Picture Frame doesn't power on | The POWER connector to the unit is not securely inserted. | Make sure you connect the AC adapter to the frame properly and make sure you have powered on the unit by using the On/Off button. When you connect the AC adapter to the frame and power up the unit, even without a memory card, you should see a blank screen. If you don't see the lit screen, check if the power is connected to the Digital Picture Frame and make sure it is securely attached. |
| No Start-up screen | Memory card is not inserted correctly. | Insert a supported memory card |
| No photo on the memory card | Card is wrongly inserted | Verify if the way you inserted the card is correct. Make sure the front label of the memory card is facing AWAY from you. Do not force the memory card into the slot. |
| The File doesn't play | Incompatible File Format | Make sure there is at least one supported photo file on the memory card. Compatible Photo format: JPEG |

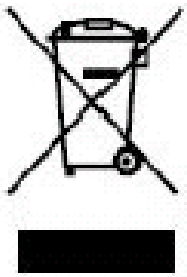

This symbol indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe. To ensure the correct waste treatment of the product and battery, please dispose them in accordance to any applicable local laws of requirement for disposal of electrical equipment or batteries. In so doing, you will help to conserve natural resources and improve standards of environmental protection in treatment and disposal of electrical waste (Waste Electrical and Electronic Equipment Directive).